

Trunk/Hatch Pin	brown/white	-	fuse box, brown 16 pin plug, pin 5
Rear Glass Pin	N/A		
Hood Pin	red/white	-	fuse box, white 16 pin plug, pin 12
Trunk/Hatch Release	black/yellow (rear handle sw) (some models only)	-	driver kick, 20 pin plg, pin 16 or fuse box, brown 16 pin plg, pin 14
Trunk Release Motor	red/white	5 wire	fuse box, white 20 pin plug, pin 1
Fuel Door Release	N/A		
Power Sliding Door (Left)	N/A		
Power Sliding Door (Right)	N/A		
Factory Alarm Arm	factory remote only		
Factory Alarm Disarm	see disarm no unlock		
Disarm No Unlock	Transponder and ignition		
Trunk Alarm Shunt	N/A		
Tachometer	NOT red/white (non-turbo) or red/black (turbo)	ac	any fuel injector
Wait to Start	N/A		
Neutral Safety	N/A		
Clutch Pedal	red/wht (Lancer), blu/red (Evo) (in); blk/red (out)	+ N.O.	clutch switch, white 2 pin plug, pins 1 and 2
Fuel Pump	blue	+	fuse box, white 2 pin plug, pin 1
Rear Defroster	blue	- latched	fuse box, white 24 pin plug, pin 12
Mirror Defroster	same as rear defroster		
Left Front Heated Seat	green	5 wire	heated seat switch, white 9 pin plug, pin 3
Right Front Heated Seat	blue	5 wire	heated seat switch, white 9 pin plug, pin 9
Speed Sense	white/blue	ac	radio, white 20 pin plug, pin 11
Brake Wire	red	+	brake switch, 4 pin plug, pin 1
Parking Brake	lt. green	-	parking brake switch or passenger kick, white 20 pin plug, pin 5
Horn Trigger	green	-	horn switch or fuse box, white 19 pin plug, pin 19
Wipers	gm (Lancer) or gry/red (Lancer Evo) (L); blue (H)	+	fuse box, white 16 pin plug, pins 6 and 5
Left Front Window (Up/Down)	purple - blue	A	power window main switch, white 19 pin plug, pins 2 and 6
Right Front Window (Up/Down)	brown - green	A	driver kick, white 12 pin plug, pins 4 and 5
Left Rear Window (Up/Down)	white - blue/white	A	driver kick, white 12 pin plug, pins 6 and 1
Right Rear Window (Up/Down)	gray - yellow	A	driver kick, white 12 pin plug, pins 10 and 11
Sun Roof (Open/Close)	yellow - green (function with ignition on only)	-	sunroof switch, black 6 pin plug, pins 5 and 6
Sun Roof (Limit/Close)	N/A		
Memory Seat 1	N/A		
Memory Seat 2	N/A		
Memory Seat 3	N/A		
Radio 12V	red/white	+	radio, white 20 pin plug, pin 10
Radio Ground	black	-	radio, white 20 pin plug, pin 20
Radio Ignition	yellow or blue/red	+	radio, white 20 pin plug, pin 1
Radio Illumination	green/white (dimmer)	+	radio, white 20 pin plug, pin 9
Factory Amp Turn-on	pink or blue	+	radio, white 18 pin plug, pin 17 or 7
Power Antenna	pink	+	radio, white 20 pin plug, pin 14
Left Front Speaker (+/-)	white/blue - black/yellow	+,-	radio, white 20 pin plug, pins 8 and 18