

The end cap is used to prevent the nocks falling off during shooting

www.archerysupplier.com

End Cap

1) Insert the cap into the shaft;

2) use the nock to push the end cap

www.archerysupplier.com

Stop pushing while the nock fit well the arrow shaft

www.archerysupplier.com

So the end cap's position is confirmed now,
then drag the nocks out of shaft

