

# USER'S MANUAL

JAMMER FOR CELLULAR & WIRELESS SIGNAL

○ **Being familiar immediately**

Thank you for you using this jammer, Now, let me introduce and make you have better understanding about the positions of all the buttons, function of accessories and other hardware



○ **Elevation**

○ **Left side elevation**



○ **Right side elevation**



○ **TOP side elevation**



CDMA/DCS/PCS/3G/GPS/2.4G/LTE/Wimax RF Outputing port(connect antenna)

○ **Technology index**

Output port	Frequency	Average out-putting power	Channel out-putting power
CDMA	851-894MHz	35dBm	5dBm/30KHz(min)
DCS&PCS	1805-1990MHz	33dBm	2dBm/30KHz(min)
GSM	925-960MHz	33dBm	2dBm/30KHz(min)
3G	2110-2170MHz	33dBm	2dBm/30KHz(min)
WIFI2.4G	2400-2500MHz	30dBm	0dBm/30KHz(min)
GPS	1570-1580MHz	31dBm	5dBm/30KHz(min)
4GLTE	700-800MHz	34dBm	5dBm/30KHz(min)
4GWIMAX	2496-2690MHz	30dBm	3dBm/30KHz(min)
Power supply: AC adapter (AC220V-DC12V)			
Shielding Radius: (2-40) meters@-75dBm still depends on the strength signal in given area.			
Dimension: (width, height, length) 140x51x355mm			

○ **Starting use**

Carefully open up the packaging case and reserve it for the purpose of loading or shipping in the future.

Please check whether all the things are kept in good condition or not. If you encounter the bad condition of the elements or being damaged, please contact your dealer immediately.


○ **Connecting system**

After connecting all of the subassemblies, please connect one side (DC) of power supply wire onto the device's power port, and connect the other side to the power supply jack.



○ **Turning on your jammer**

After connecting all of the surrounding elements and tie wires, please press the switch of left side to ON then the jammer will be working normally. The power pilot lamp will be green

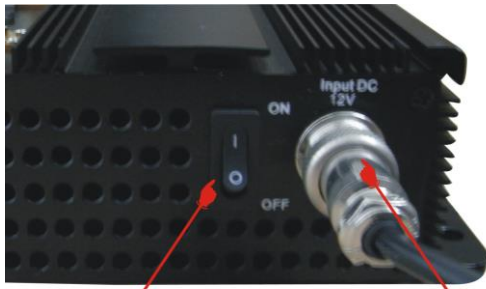

主电源开关  
(ON开机, OFF关机)  
The switch of system's  
直流电源插孔  
(DC 12V Power Jack)  
Main power supply



电源指示灯  
(Pilot Lamp)

**Adjustable Switcher**

- ③ Finding the adjustable switch of system's to adjust each bands RF power output level or turn off without influencing the other bands operation



**Turning off your jammer**

- ③ Finding the switch of system's main-power supply on the system's left side faceplate and turning it off.

**Notices**

- ③ Before linking all the antenna, power supply shall not be switched on at first. Non taking off antenna when the mainframe is in the working condition.
- ③ The jammer shall be installed in the position with good ventilation. And large-scale things shall be avoided to ensure to the shielding effect.
- ③ When use the jammer outdoors, preventing water shall be taken into consideration.
- ③ Antenna shall be used vertical to the ground.
- ③ If you used in car, Please make sure the car output adapter is DC12V, this machine only can be working on DC12V .**Not DC24V.**

