

--Instructions--

- 1- Remove stock gpu and ram thermal pads and clean off any stock thermal paste
- 2- Use the sandpaper to polish copper contacts on the gpu and to remove gpu die print if desired
- 3- Apply thermal paste to the gpu copper contact on the heatsink
- 4- Install the shim in the corner of the copper contact exactly as shown in the picture
- 4- Place a thermal pad on each ram chip
- 5- Apply thermal paste to the gpu and cpu
- 6- Install the heatsink

