 


Wireless

Flash Trigger

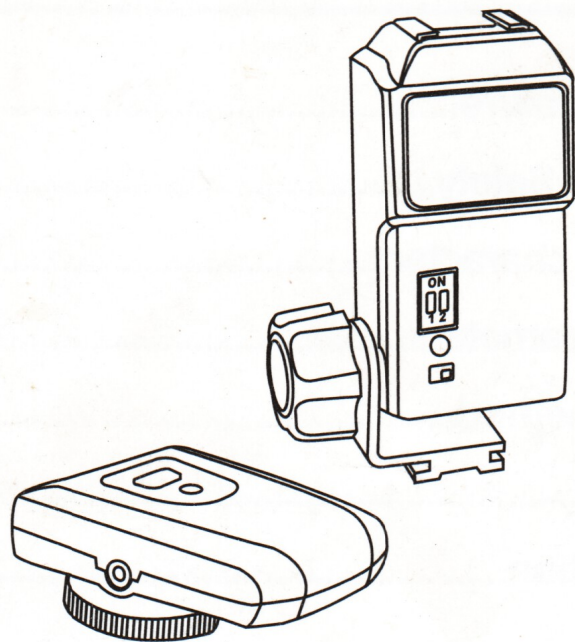


 
CE RoHS

Table of Content:

Nomenclature.....	1
For Your Safety.....	2
Product characters.....	5
Main parameters.....	5
Using method.....	6
Caution.....	7
Description.....	7

【Nomenclature】

 - (1) Hot shoe
- (2) Receiving indicator lamp
- (3) Power switch
- (4) Channel code switch
- (5) Receiver fix knob
- (6) Channel code switch
- (7) Camera hot shoe
- (8) Sync cord jack
- (9) Transmitter indicator lamp
- (10) Test button

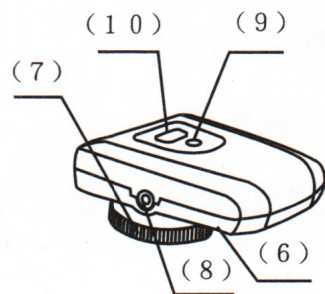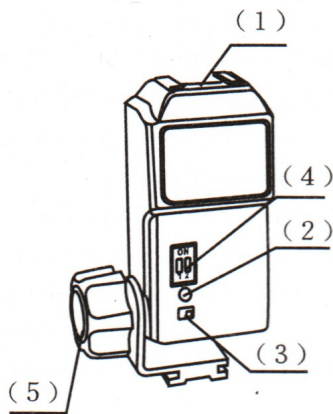

【For Your Safety】

To prevent damage to your product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use this equipment will read them.

***Do not disassemble or modify**

Failure to observe this precaution could result in electric shock or product malfunction. Should the product break open as the result of a fall or other accident, remove the batteries.

***Keep dry**

Do not handle with wet hands or immerse in or expose to water or rain. Failure to observe this precaution could result in fire or electric shock.

***Do not use in the presence of flammable gas**

Failure to observe this precaution could result in explosion or fire.

***Keep out of reach of children**

This device contains small parts which may pose a choking hazard. Consult a physician immediately if a child swallows any part of this device.

***Do not expose to high temperatures**

Do not leave the device in a closed vehicle under the sun or in other areas subject to extremely high temperatures. Failure to observe this precaution could result in fire or in damage to the casing or internal parts.

***Observe precaution when handling batteries**

Batteries may leak or explode if improperly handled. Observe the following precautions when handling batteries for use in this device:

1. Use only batteries listed in this manual. Do not mix old and new batteries or batteries of different types.
2. Read and follow all warnings and instructions provided by the manufacturer.
3. Do not short or disassemble.
4. Do not expose to flame or excessive heat.
5. Do not attempt to insert batteries upside down or backwards.
6. Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the batteries when leaving the product unattended for prolonged periods or when no charge remains.
7. Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

【Product characters】

 
 
- 1--Wireless control
- 2--Convenient operation
- 3--Low output consume
- 4--Low battery power consume
- 5--Low voltage trigger
- 6--No harmful to camera
- 7--Isolation channel

【Main parameters】

- <1> Power: 2AAA
- <2> Channel: 4
- <3> Outdoor operation distance: about 20-30m
- <4> Indoor operation distance: about 20m
- <5> Sync speed: 1/250sec.

【Using method】

1.Insert the transmitter to camera hot mount directly w/screw lock system .Turn on the camera and transmitter and set in same channel.

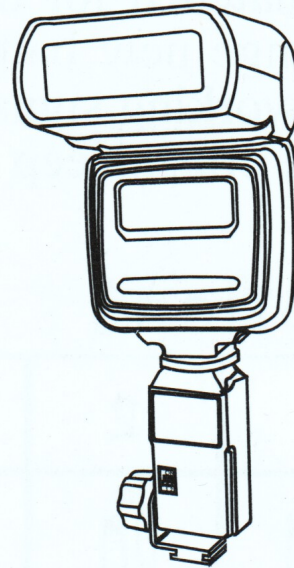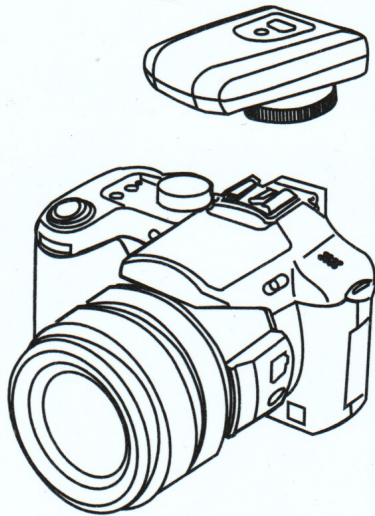

2.Attach camera flash to receiver hot mount. Press camera shutter ready for instant using.

【Caution】

It should be matched for the power used in our product. It is needed to change new battery when the power of the battery waste all and working signal light of the receiver turns thinner. Avoid fall and crush. Keep dry and avoid electric shock , rain and dampness.

【Description】

Channel NO.	1	2	3	4
Receiver	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>
Emitter	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>	<div>NO</div> <div><div><div></div><div></div></div><div>1 2</div></div>