

J6 F14-SA COACH MONITOR/GENSET CTR.

J3 MATE-N-LOK 2 PIN
PIN FUNCTION
1 ISOLATOR RELAY "HOT" TERM.
2 ISOLATOR RELAY GROUND TERM.

J1 KK158 8 PIN
PIN FUNCTION
1 CHASSIS BD "I" TERM.
2 CHASSIS BD "S" TERM.
3 COACH BD "S" TERM.
4 COACH BD "I" TERM.
5 IGNITION RELAY "HOT" TERM.
6 IGNITION RELAY GROUND TERM.


J2 MATE-N-LOK 9 PIN
PIN FUSE FUNCTION
1 CHASSIS BD "I" TERM.
2 CHASSIS BD "S" TERM.
3 COACH BD "S" TERM.
4 N.C.
5 N.C.
6 COACH BD "I" TERM.
7 COACH BD POWER
8 F19-SA CHASSIS BD POWER
9 F19-SA BD RELAY GROUND

J4 MATE-N-LOK 12 PIN
PIN FUSE FUNCTION
1 F16-10A 5A TV BOOSTER/AISLE LT
2 F17-5A AUX START SWITCH
3 F18-5A SOLAR PANEL
4 F15-5A L.P. DET. (COACH)
5 N.C.
6 GROUND
7 N.C.
8 N.C.
9 F13-15A FOG LIGHTS
10 AUX START RELAY COIL
11 IGNITION RELAY COIL
12 FOG LIGHT RELAY COIL

J11 F11-15A POWER SEATS
J12 F12-15A REAR HEATER

J5 MATE-N-LOK 8 PIN
PIN FUSE FUNCTION
1 F3-25A STEP MOTOR
2 F4-15A COAXIAL SWITCHES
3 F5-25A COAXIAL SWITCHES
4 F6-25A COAXIAL SWITCHES
5 F7-15A REMOTE MIRROR
6 F8-15A SPOTLIGHT
7 F9-20A POWER WINDOW
8 F10-15A DEF. FANS

J9 F1-15A SPARE (CHASSIS BD)
J10 F2-5A CHASSIS MONITOR

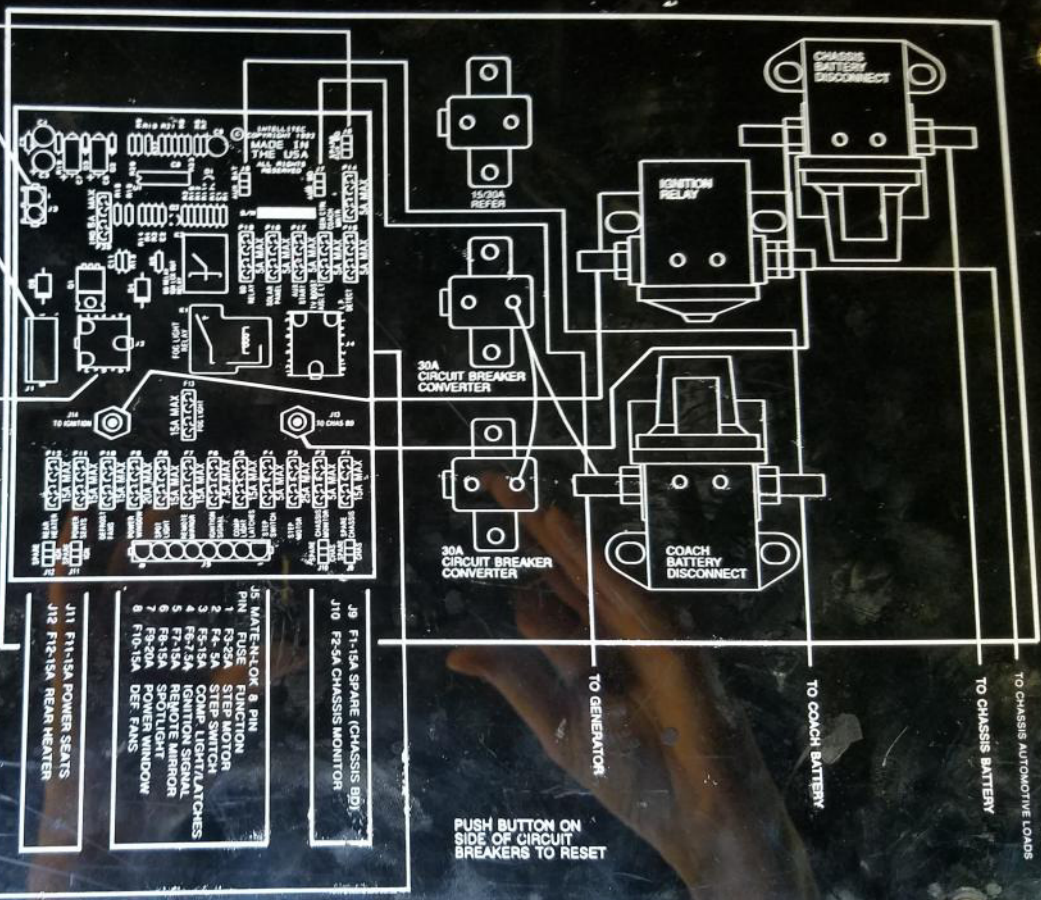

PUSH BUTTON ON
SIDE OF CIRCUIT
BREAKERS TO RESET

TO GENERATOR

TO COACH BATTERY

TO CHASSIS BATTERY

TO CHASSIS AUTOMOTIVE LOADS