


HP 22-in-1 (USB) Media Card Reader Quick Setup

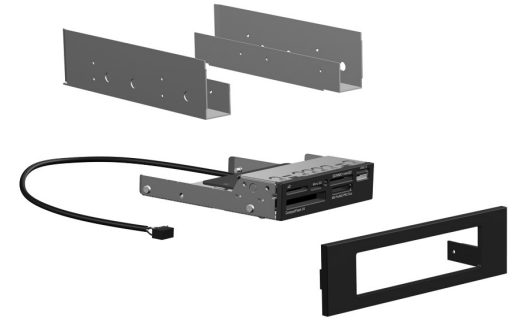

<p>❶ • xD-Picture Card (xD)</p>	<p>❷ • Micro SD(T-Flash) • Micro SDHC</p>
<p>❸ • Status Light</p>	<p>❹ • Secure Digital Card (SD) • Secure Digital High Capacity (SDHC) • Mini SD • Mini SDHC • MultiMediaCard (MMC) • Reduced Size MultiMediaCard (RS MMC) • MultiMediaCard 4.2 (MMC Plus including MMC Plus HC) • Reduced Size MultiMediaCard 4.2 (MMC Mobile, including MMC Mobile HC) • MMC Micro (adapter required)</p>
<p>❺ • USB Connector</p>	<p>❻ • CompactFlash Card Type I • CompactFlash Card Type II • MicroDrive</p>
<p>❼ • Memory Stick (MS) • MagicGate Memory Stick (MG) • MagicGate Memory Stick Duo • Memory Stick Select • Memory Stick Duo (MS Duo) • Memory Stick PRO (MS PRO) • Memory Stick PRO Duo (MS PRO Duo) • Memory Stick PRO-HG Duo • Memory Stick Micro(M2)(adapter required)</p>	


© Copyright 2008 Hewlett-Packard Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.
Printed in

First Edition: August 2008




469309-B21

1


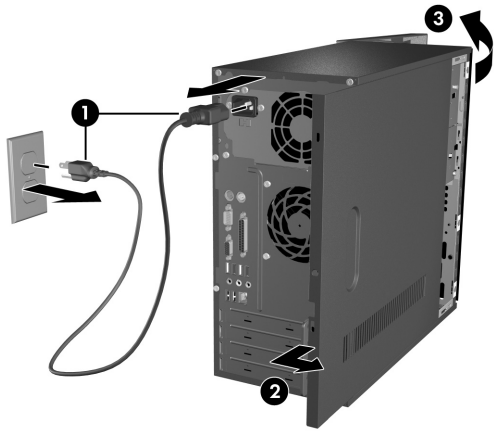


2A

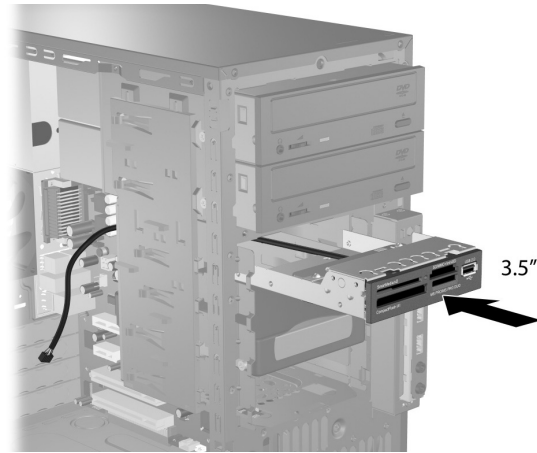

← or →

2B

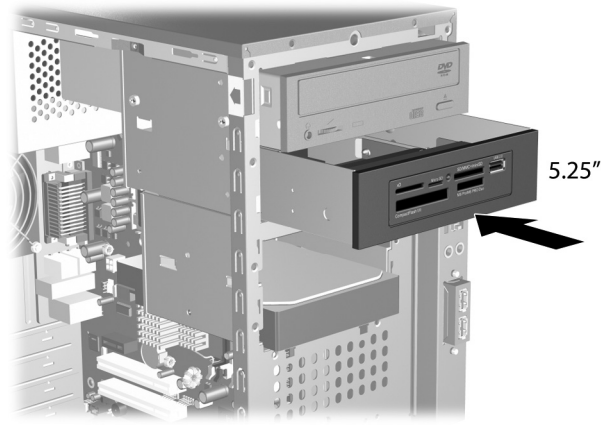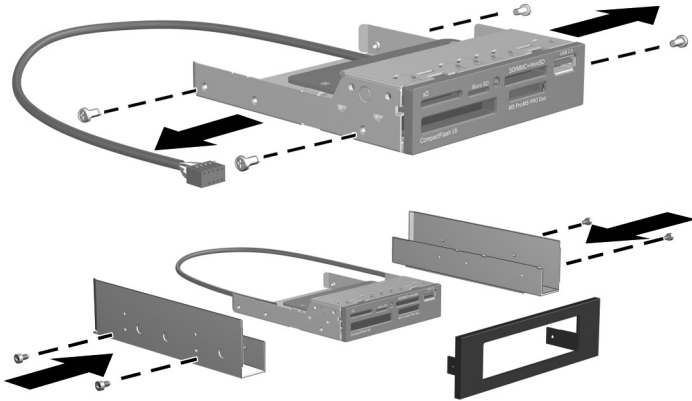

3

