


Planning wrist watch

As I do normally I write this tut with the usual idea: future use and protect from forgetting.

The planning is comprised of 2 parts: the upper component, and the lower one.

1. One should start with the lower, for it's the easier one, and also serves as the basis.

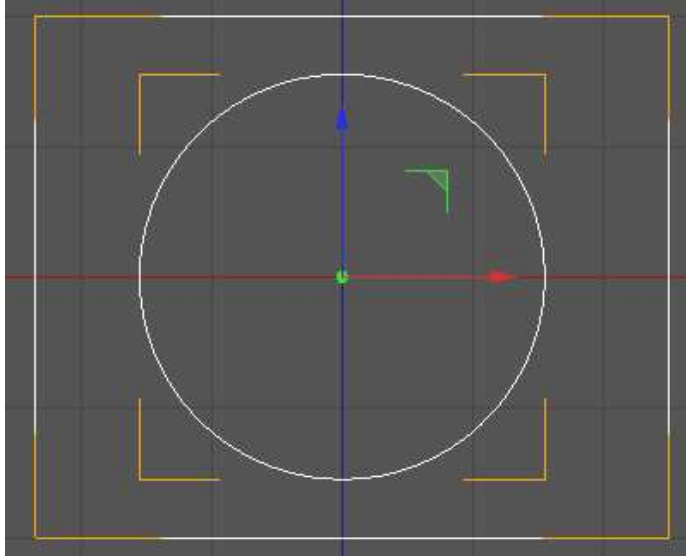


These two serve as basis for the



upcoming drawing: 2. use the linear and follow the example:


3. Duplicate

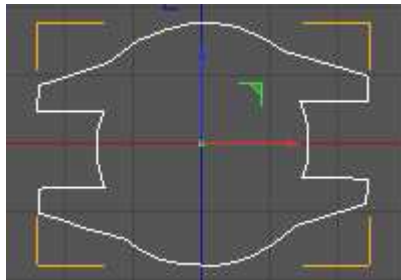


and redraw the entire figure:

You can dispose of all


unnecessary aids. 4. Draw this figure. This will be the basic housing for the watch:

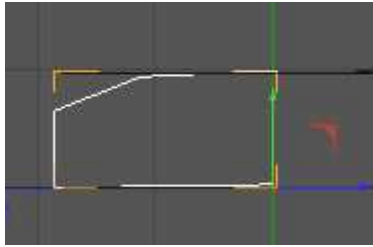


5. Activate the Lathe function:

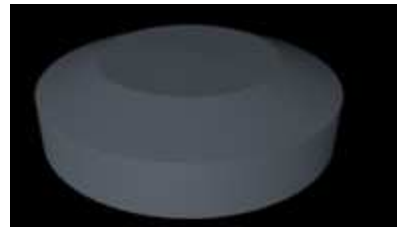

6. Based on the basic figure prepared earlier, create 4 cubes (band holders):

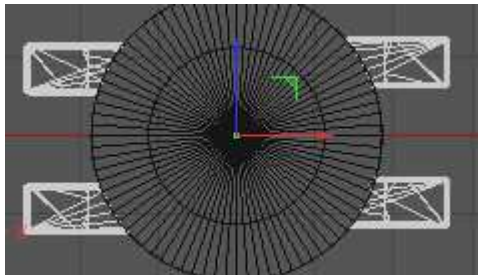

7.

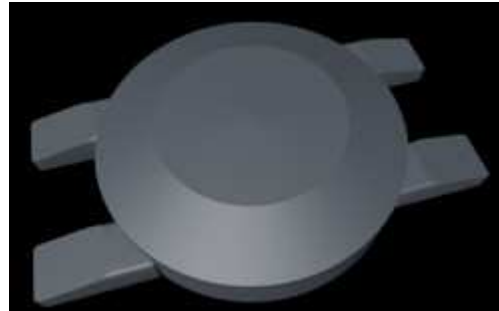

Combine

all. Done!