


# **AMCOR** Shower System

## Installation Instructions

To ensure satisfying performance, please read and follow these easy step by step instructions.

### Assembly:

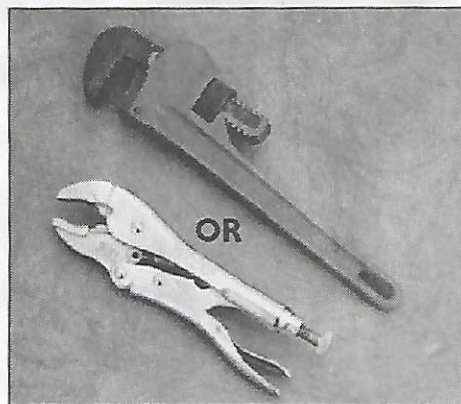

1. All you need is a wrench  
OR pliers.




2. Remove your existing  
shower head.



3. Clean the shower arm.  
Lightly apply white tape (included)  
around the threads of the  
shower arm.



4. Attach shower head to shower arm and adjust as desired.

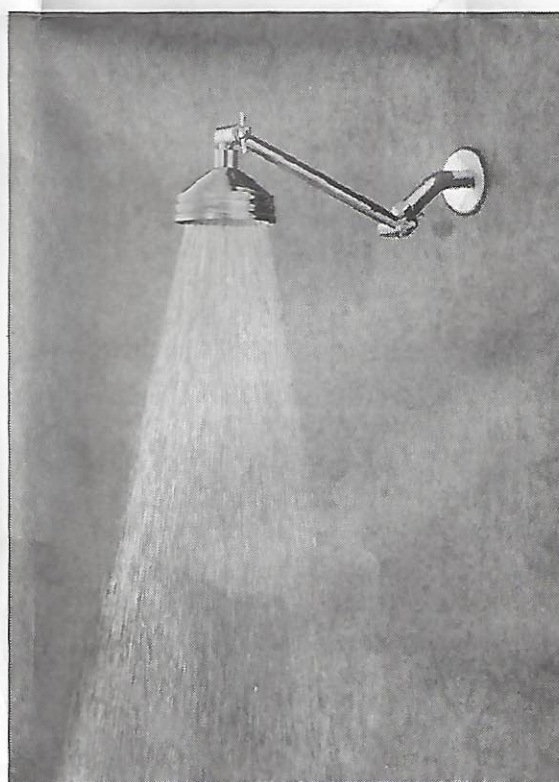

**NOTES:** You can use a wrench to tighten connections at any step. • When tightening, put a rag around the shower connections to protect them.