




Zubehör - Einbauanleitung

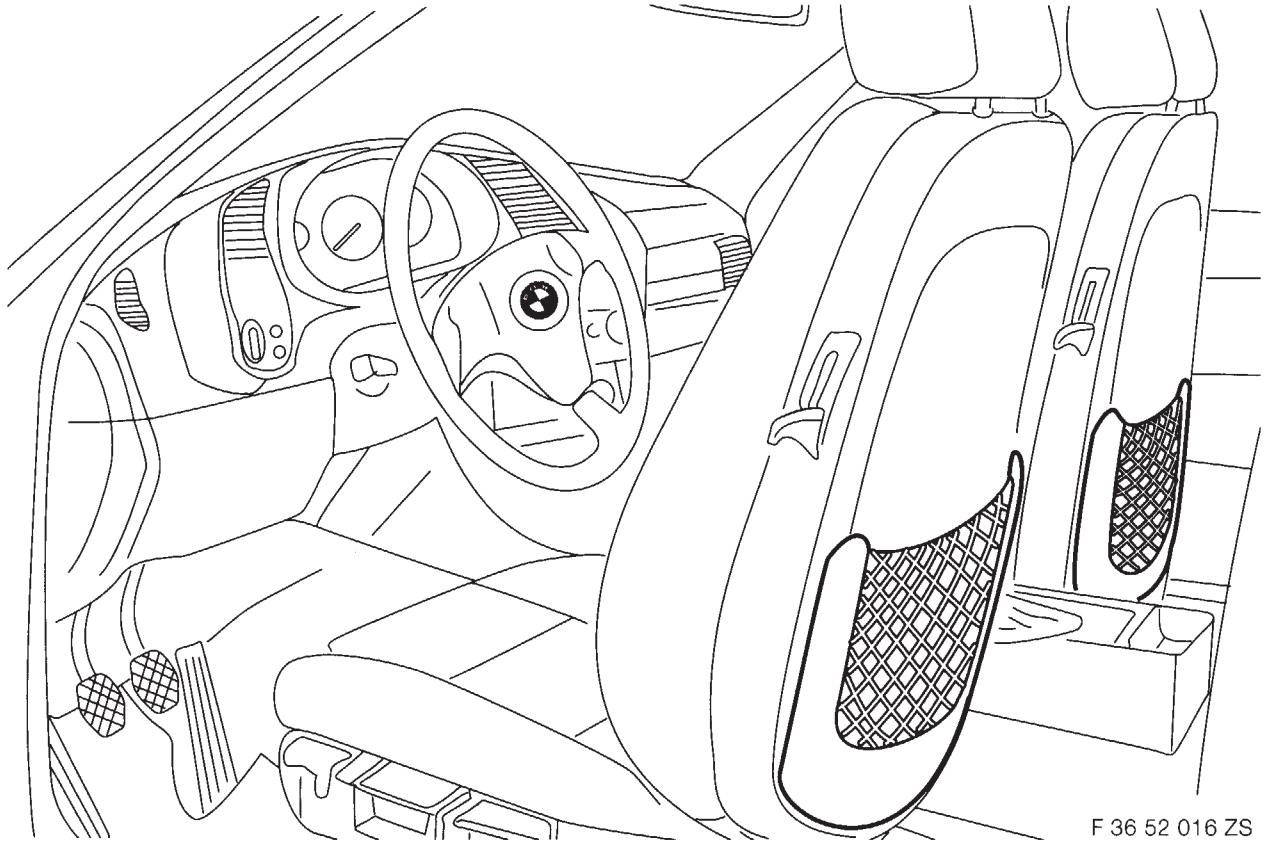

F 36 52 016 ZS

Installation Instructions

Front Seat - Luggage Net

BMW 3 Series E36/5 compact, E36/4 Saloon from 9/94 and E36/2 Coupe from 9/94

Front Seat - Luggage Net

BMW 3 Series E36/5 compact, E36/4 Saloon from 9/94 and E36/2 Coupe from 9/94

Specialised knowledge is required.
Installation time is approx. 0.5 hours per seat, though
this may vary depending on the condition of the vehicle
and its fittings.

Tools and Materials Required

Screwdriver
1/4" ratchet
1/4" Torx drive socket T 20
Marking tool
Water-soluble marker pen
Drill
Drill bit (6.5 mm dia.)

1. Removing Backrest Shell

F 36 52 017 ZS

Withdraw head restraint (1) from seat backrest (2).

For 2-door vehicles:

F 36 52 018 ZS

Remove lever for seat folding device (1) and cover (2)
from backrest (3).

F 36 52 019 ZS

Remove Torx screws (1) and lift backrest shell (2) from
seat (3).

F 36 52 020 ZS

Measure bore position (1) as shown in illustration and
drill with drill bit dia. = 6.5 mm.

F 36 52 021 ZS

Align parcel net (1) according to position of bore (2),
then mark and drill remaining bores as indicated in
illustration (arrows).

2. Fitting Parcel Net

F 36 52 022 ZS

Insert parcel net (1) into backrest shell (2) and secure
with spring nuts (3).

Reinstall backrest shell in reverse sequence to
removal.

